


Executive Hood Installation Instructions

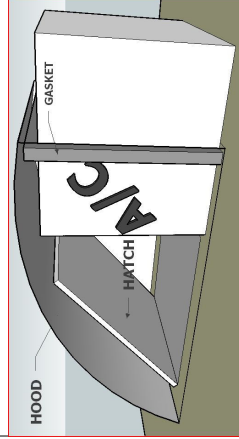

www.moby-cool.com

Tel: 407-435-9733

Executive Hood Installation Instructions Hood Assembly and Installation:

1. Locate all the parts. Side A, Side B, Top panel, hardware package, and 2"x2" insulating foam.
2. Locate marking labeled "Side-A" on Side A.
3. Locate marking labeled "Inside" and "outside" on the top panel.
4. Locate the deck mounting tabs bolted to the top panel.
5. Remove backing of two-sided tape on Side-A and carefully insert the top panel by guiding the edge of the panel along the curved edge of Side A.

NOTE: It is helpful to have a friend assist you to make sure that the screw holes in the top panel line up perfectly with the screw holes in Side-A. Once the side and the top are stuck together, you cannot reset it!

6. Repeat Step 5 for Side B.
7. Install s/s screws in each hole. They should be snug but take care not to over tighten.
8. Test-fit you're A/C and hood over the hatch opening to ensure a good fit.
9. Once you are satisfied with the location of A/C and hood, mark where the A/C sits on the deck and remove it.
10. Place the flat, white 3/4"x1/4"x24" seal beneath the A/C.
11. Place the A/C over the seal.
12. Place 2"x2" foam seal around A/C, then put hood over A/C.
13. Place 1"x1"x2" 90° aluminum clips so that they meet with the A/C and deck (1 on each side)

14. Screw clips into place using the provided stainless steel self-tapping screws.

15. Fasten hood to deck using s/s washers and s/s screws provided. **Seal all deck penetrations with PL5200.**

16. Screw 1"x1"x2" deck mounts on radiused edge of hood to the deck using PL5200.

Note: Check all screw lengths to ensure it does not penetrate all the way through the deck. Also, sometimes the hood can temporarily be fastened to the deck by using "C-Clamps". (Not provided). When using C-Clamps, use a backing material such as wooden shims and do not over tighten.

